


## Cleaning a 10,300 GPH Pump

1. Remove the filter sock, and clean any leaves/debris out of it. (If this gets significantly clogged up, it can deprive the pump of water, and burn it out.)
2. Take the filter cover off by pulling it out from the main housing.
3. Use a screw driver to take out the (4) screws that attach the impeller cover to the main housing.



4. Pull the impeller cover off to reveal the impeller, and notice the small dot at the bottom side, that ensures the impeller is placed appropriately back into position after cleaning.
5. Pull the impeller out, and clean off any sediment that is either on the cylinder and in the chamber it fits in.

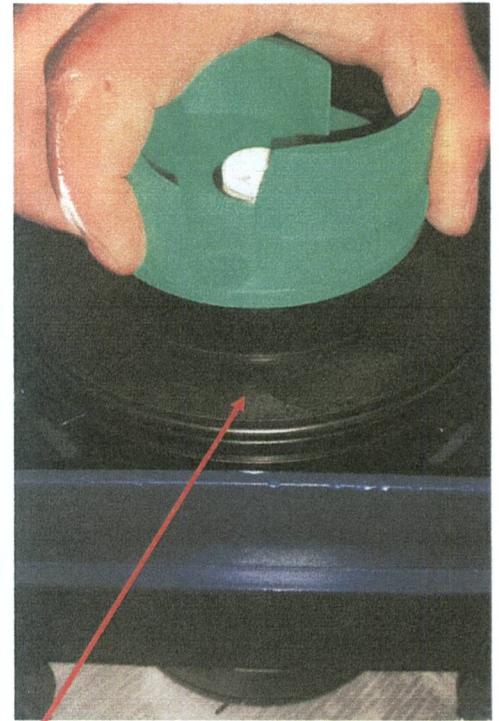